
AGPS User's Manual (PC)

VENUS 6 series AGPS AGPS Infrastructure


AGPS Infrastructure

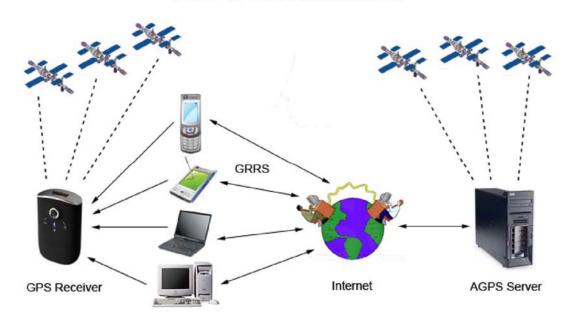

Preliminary, Proprietory and Confidential

Method A:


STEP 1: Connect your GPS device

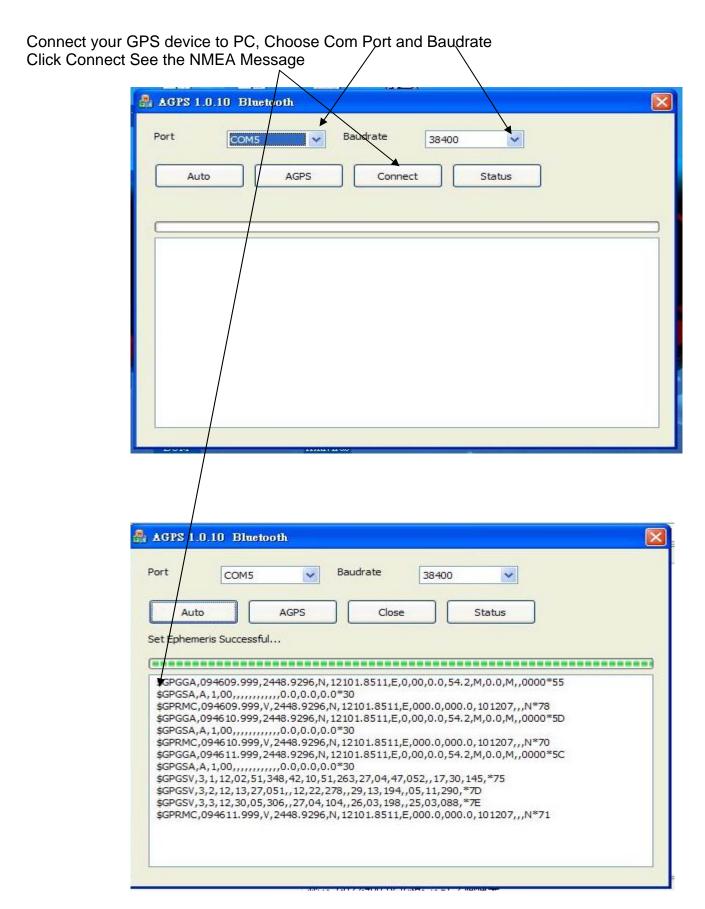


PS: Make sure your internet was connected

STEP 2: AGPS data download

Choose AGPS Download

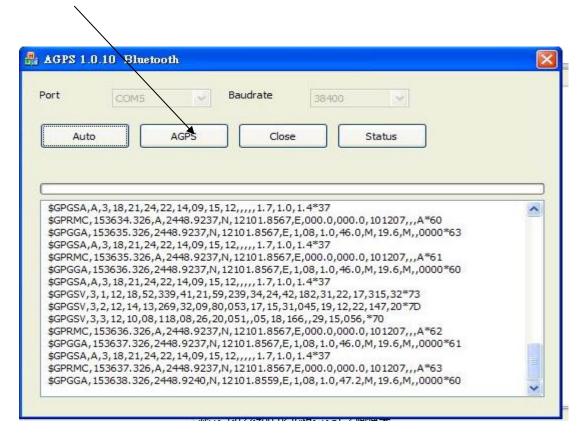


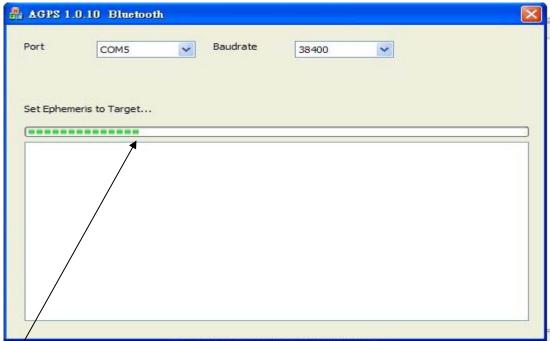


Automatic connect to internet and download to Flash memory

STEP 3: AGPS Download finish

Set Ephemeris Successful

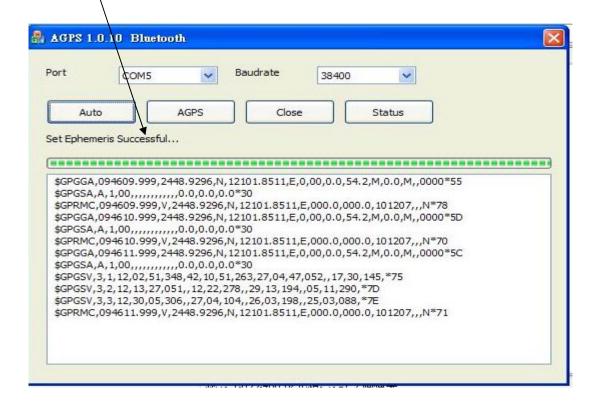

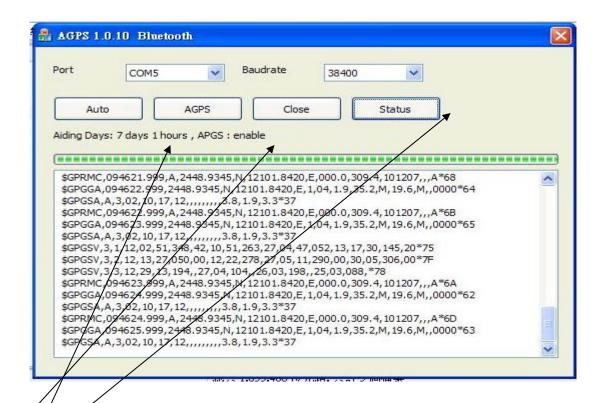


Option: AGPS Enable or Disable

Option: AGPS Status(7 days 1 hours)

Method B:


STEP 1: Connect your GPS device

Connect your GPS device to PC, Click Auto to scan Com Port

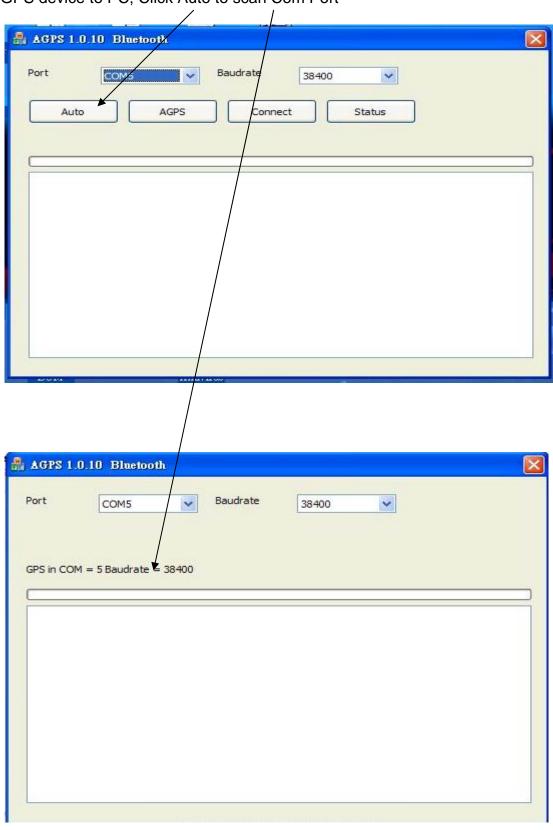



PS: Make sure your internet was connected

Automatic connect to internet and download to Flash memory

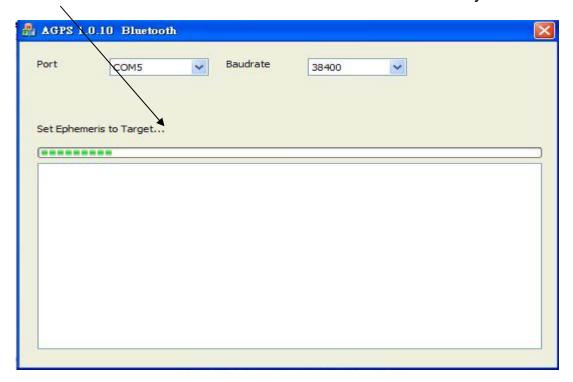

Set Ephemeris Successful

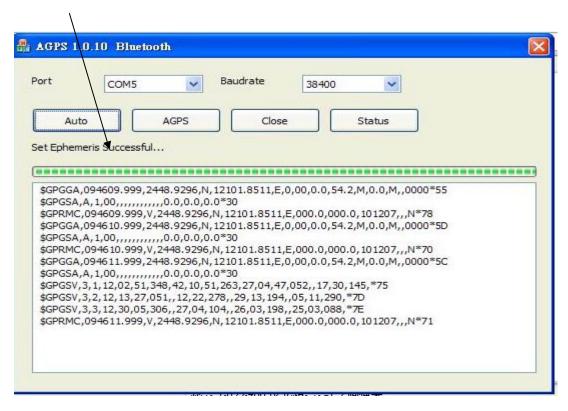

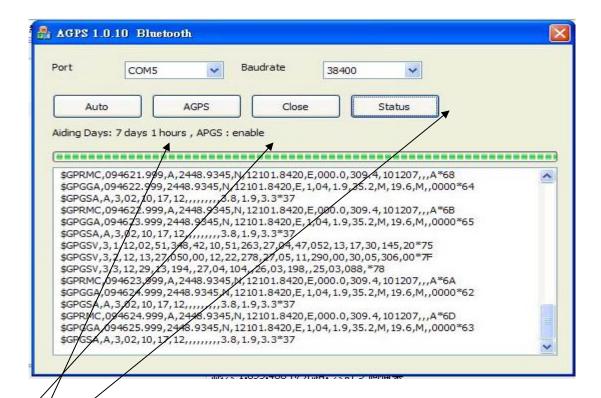


Option: AGPS Enable or Disable


Option: AGPS Status(7 days 1 hours)

Method C:


STEP 1: Connect your GPS device

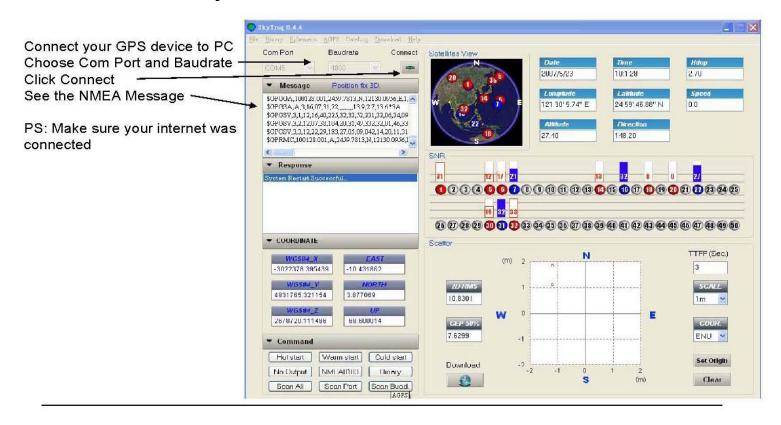


STEP 2: AGPS data download

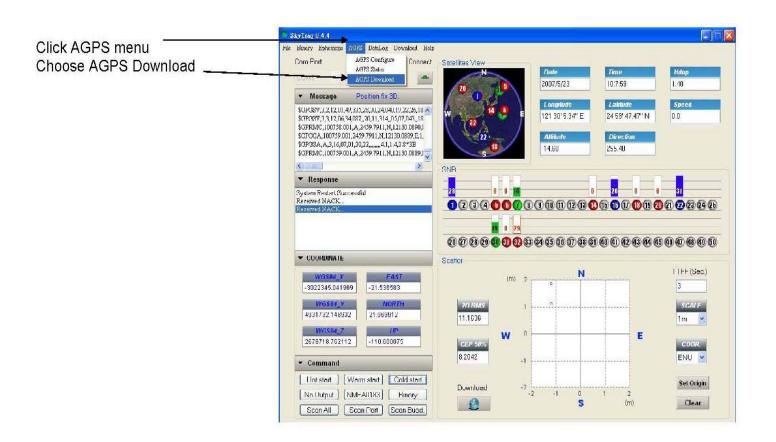


STEP 3: Automatic download

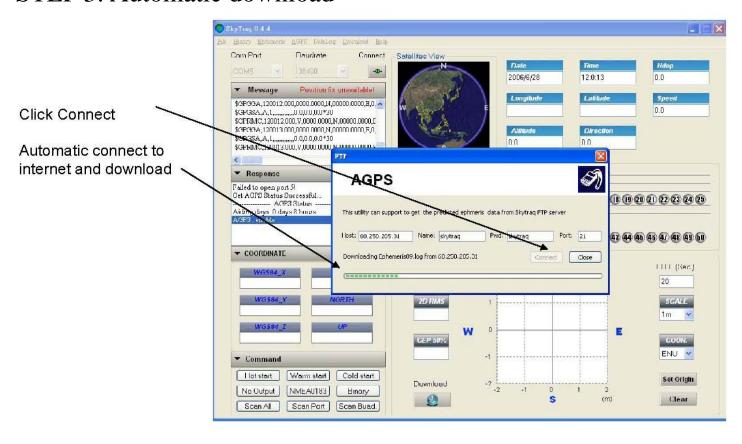


STEP 4: AGPS data download to GPS flash memory

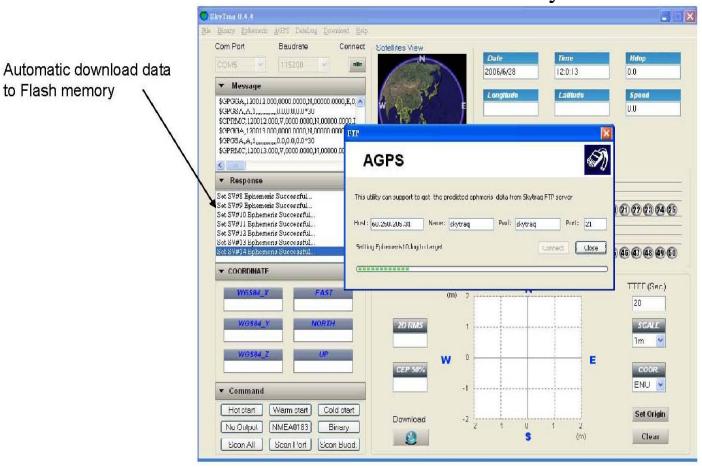


STEP 5: AGPS Download finish

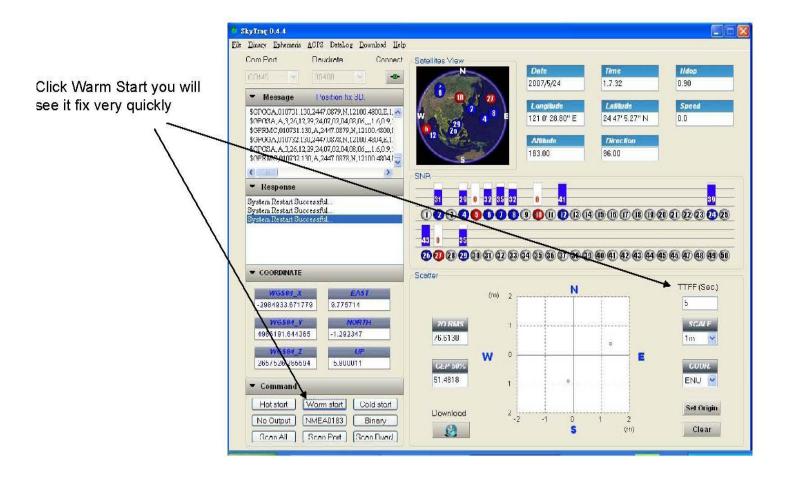

Option: AGPS Enable or Disable

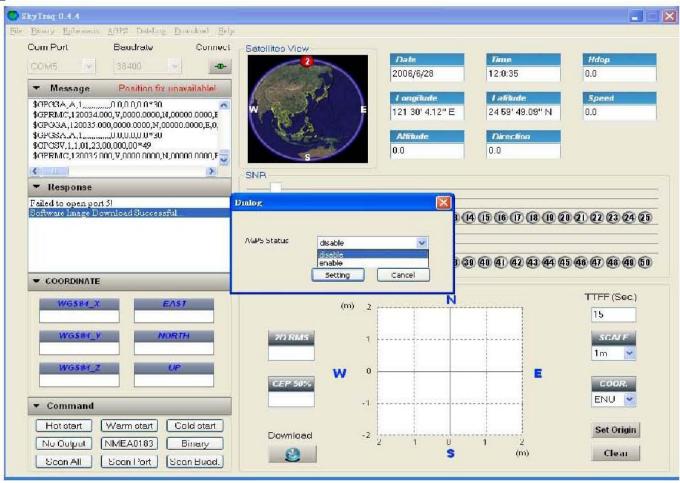

Option: AGPS Status

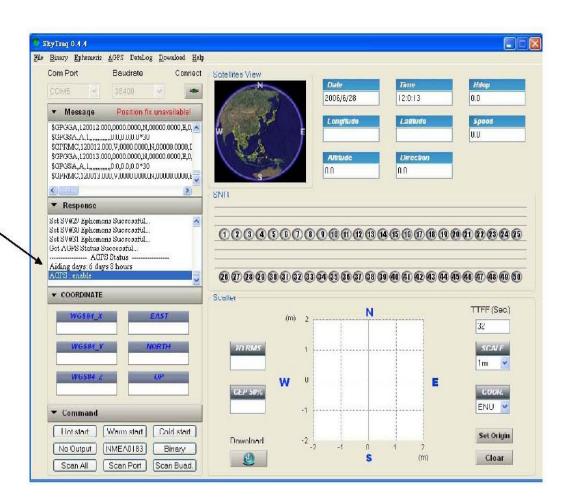

6 days ,8 hours